


ENCELIUM AREA LIGHTING CONTROLLER (ALC) - WIRE TABLE


BLACK	LINE (IN) - RELAY CONTACT
BLACK	LINE (OUT) - RELAY CONTACT
VIOLET	NOT USED - CAP OFF PER CODE
GREY	NOT USED - CAP OFF PER CODE

NOT USED WIRES  
CAP OFF WIRE  
END WITH UL  
LISTED WIRE  
NUT.

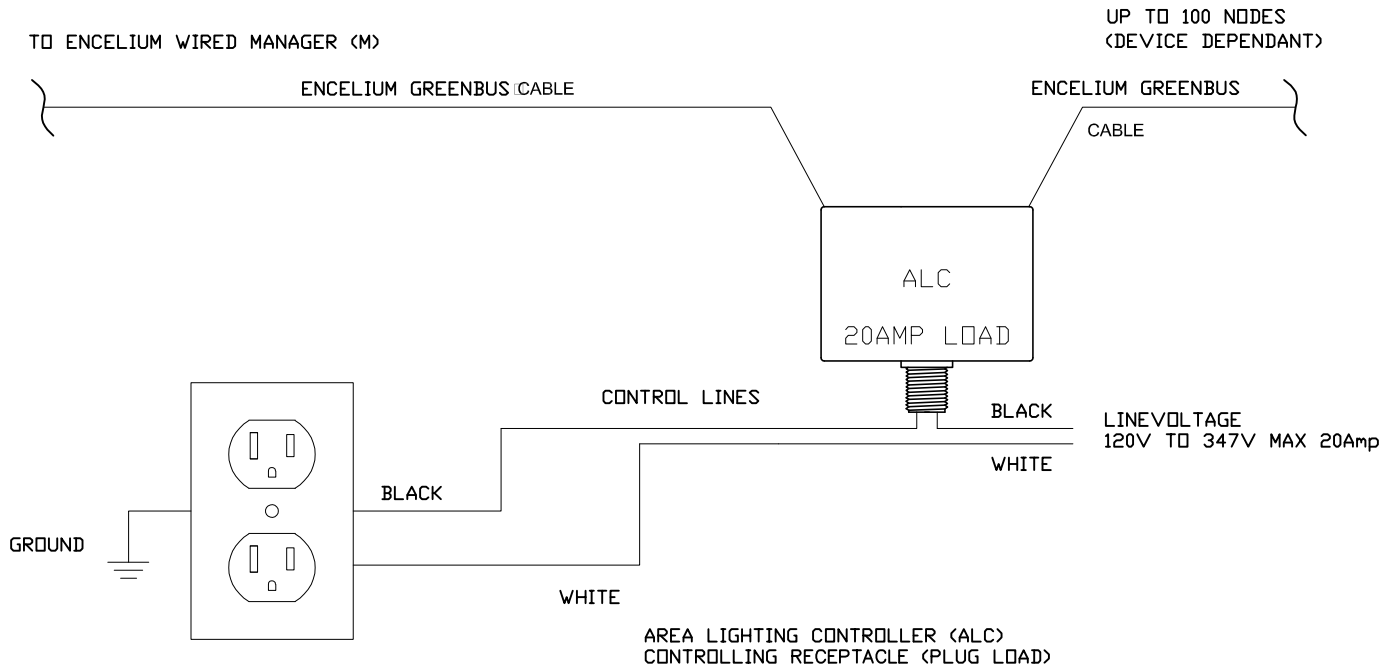

NOTES:

1. REFER TO MANUFACTURER'S SPECIFICATIONS FOR LOAD LIMITS AND DETAILED INSTALLATION INSTRUCTIONS.
2. WIRE UNIT IN ACCORDANCE WITH ALL APPLICABLE ELECTRICAL AND BUILDING CODES.
3. REFER TO ENCELIUM AREA LIGHTING CONTROLLER INSTALLATION AND SERVICE MANUAL BEFORE INSTALLING OR SERVICING MODULE.
4. FOR COMPATIBILITY WITH OTHER CONFIGURATIONS OR DRIVERS ON ENCELIUM PRODUCTS CONTACT YOUR REPRESENTATIVE.
5. FOR SOME INSTALLATIONS, A JUNCTION BOX MAY BE REQUIRED. IT IS RECOMMENDED TO SECURELY MOUNT THE ALC TO THE JUNCTION BOX USING AN AVAILABLE 1/8 INCH NOCK-OUT

REV	DESCRIPTION/CHANGE	DATE
 <a href="http://www.encelium.com">www.encelium.com</a>		
TITLE <i>ALC PLUG LOAD</i>		
SCALE <i>NTS</i>	PROJ NO. -; -	
DRAWN <i>S.PANERI</i>	DWG. NO. <i>EN-GB-011-RO</i>	SIZE <i>A</i>
DATE <i>05-APR-2021</i>	FILE NAME <i>EN-GB-011-RO-ALC-PL</i>	