


ENCELIUM SENSOR INTERFACE MODULE

KSW-300-SIM

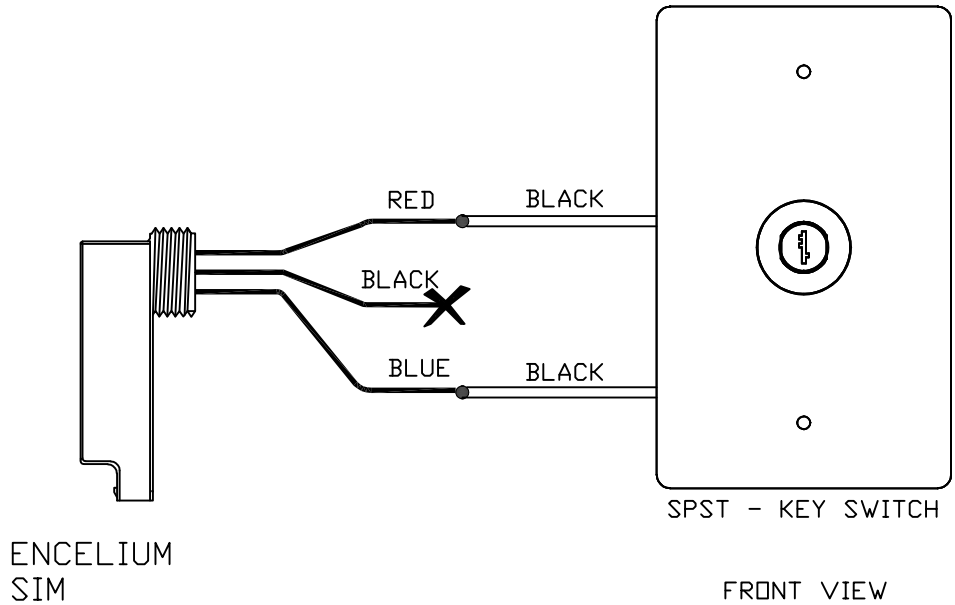

ENCELIUM
SIM


SPST - KEY SWITCH

FRONT VIEW

NOTES:

1. REFER TO ENCELIUM INSTALLATION AND SERVICE MANUAL BEFORE INSTALLING OR SERVICING UNIT.
2. WIRE UNIT IN ACCORDANCE WITH ALL APPLICABLE ELECTRICAL AND BUILDING CODES.
3. WIRE ONLY WITH CLASS 2, LOW VOLTAGE ENCELIUM GREENBUS PRETERMINATED CABLE WITH PLENUM (CMP/FTP) FLAME RATING.
4. FOR INTERCONNECTION DETAILS WITH OTHER DEVICES (BALLASTS, SENSORS, ETC.) REFER TO SPECIFIC INSTRUCTIONS FOR THE DEVICE OR CONTACT ENCELIUM.
5. USE OF APPROPRIATE ELECTRICAL JUNCTION BOX RECOMMENDED.
6. CONTAINS NO USER SERVICEABLE PARTS, REPLACE ENTIRE UNIT.

cULus LISTED

REV	DESCRIPTION/CHANGE	DATE
 www.encelium.com		
TITLE <i>SIM to KEY SWITCH</i>		
SCALE <i>NTS</i>	PROJ NO. -: -	
DRAWN <i>S.PANERI</i>	DWG. NO. <i>EN-GB-008-R0</i>	SIZE A
DATE <i>05-MAY-21</i>	FILE NAME <i>EN-GB-008-R0-SIM-KEYSW</i>	