


ENCELIUM SENSOR INTERFACE MODULE (SIM)
TO
OCCUPANCY SENSOR WIRING TABLE

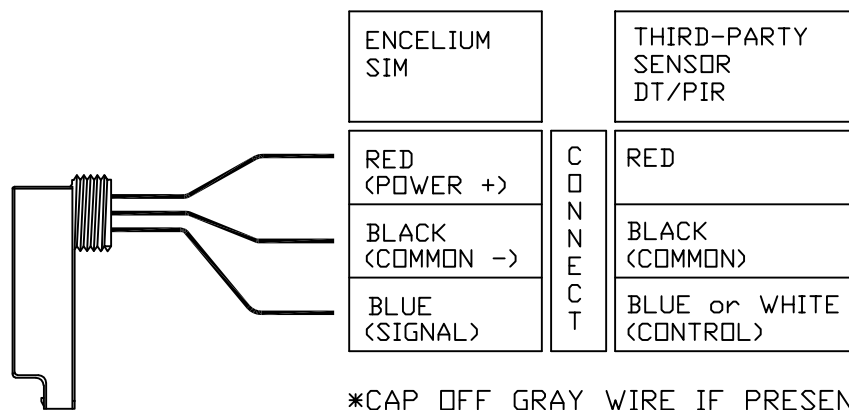

*CAP OFF GRAY WIRE IF PRESENT


ENCELIUM SIM

SENSOR INTERFACE MODULE


EN-SIM-AI/SPS-GB2-BK
EN-SIM-AI/SPS-GB2-BK/DR *

* FOR DAMP RATED LOCATIONS

WATTSTOPPER
OCCUPANCY WALL
SWITCH SENSOR
(LOW VOLTAGE)

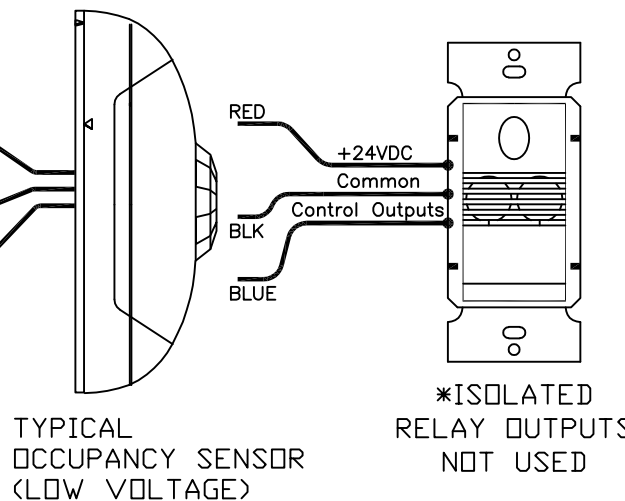


TYPICAL
OCCUPANCY SENSOR
(LOW VOLTAGE)

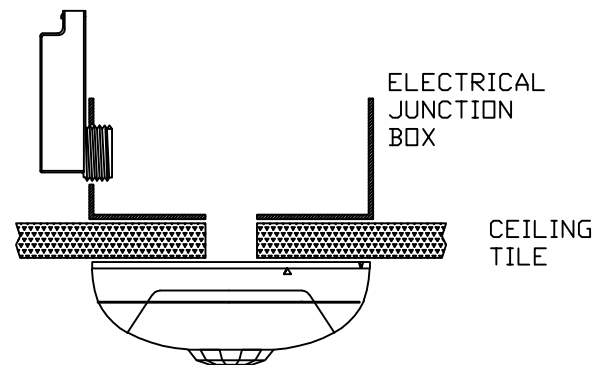

MOUNTING DETAIL

- NOTES:
1. ADJUST TIME DELAY SETTING FOR NON-ENCELIUM OCCUPANCY SENSOR TO 5MINS.
 2. POWER PACK IS NOT REQUIRED.
 3. WIRE UNIT IN ACCORDANCE WITH ALL APPLICABLE ELECTRICAL AND BUILDING CODES.
 4. USE OF ELECTRICAL JUNCTION BOX RECOMMENDED.
 5. REFER TO ENCELIUM SIM INSTALLATION AND SERVICE MANUAL BEFORE INSTALLING OR SERVICING MODULE.
 6. FOR COMPATIBILITY WITH OTHER CONFIGURATIONS ON ENCELIUM PRODUCTS CONTACT YOUR REPRESENTATIVE.
 7. PLEASE NOTE THIRD-PARTY SENSORS ARE TO BE LOW VOLTAGE, PLEASE REFER TO CUTSHEET.

REV	DESCRIPTION/CHANGE	DATE
 www.encelium.com		
TITLE <i>SIM-OCCUPANCY SENSOR</i>		
SCALE <i>NTS</i>	PROJ NO. -: -	
DRAWN <i>S.PANERI</i>	DWG. NO. <i>EN-GB-002-R1</i>	SIZE A
DATE <i>14-MAY-2021</i>	FILE NAME <i>EN-GB-002-R1-SIM-OCS</i>	